

Operating instructions and
specifications for

Uniprep 1 Rotary scrapping tool for pipes 90-400mm

Products by innovation not imitation



Helping you make the right connections™


Models covered by this manual:


Product code: 01-02-001/01-02-002

INDEX.

Pictorial representation	3
Schematic parts drawing	4
Parts list and product codes.....	5
Specifications	6
General description	7
Safety instructions	7
Instructions for use	8
Certificate of conformity	11
Certificate of calibration	12
Warranty information	13

Product code: 01-02-001/01-02-002

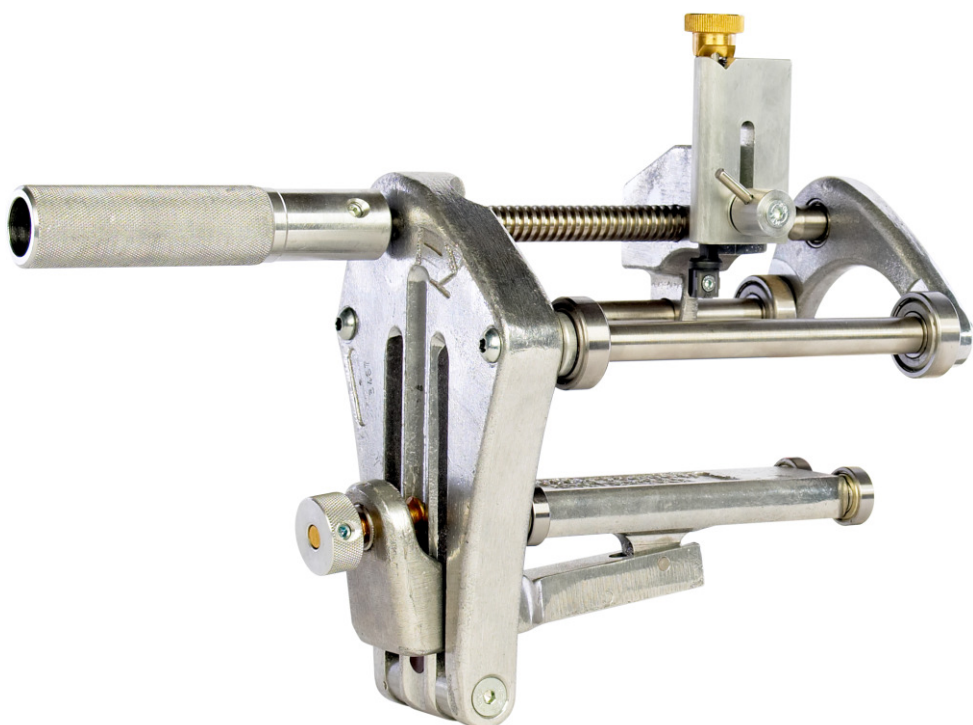

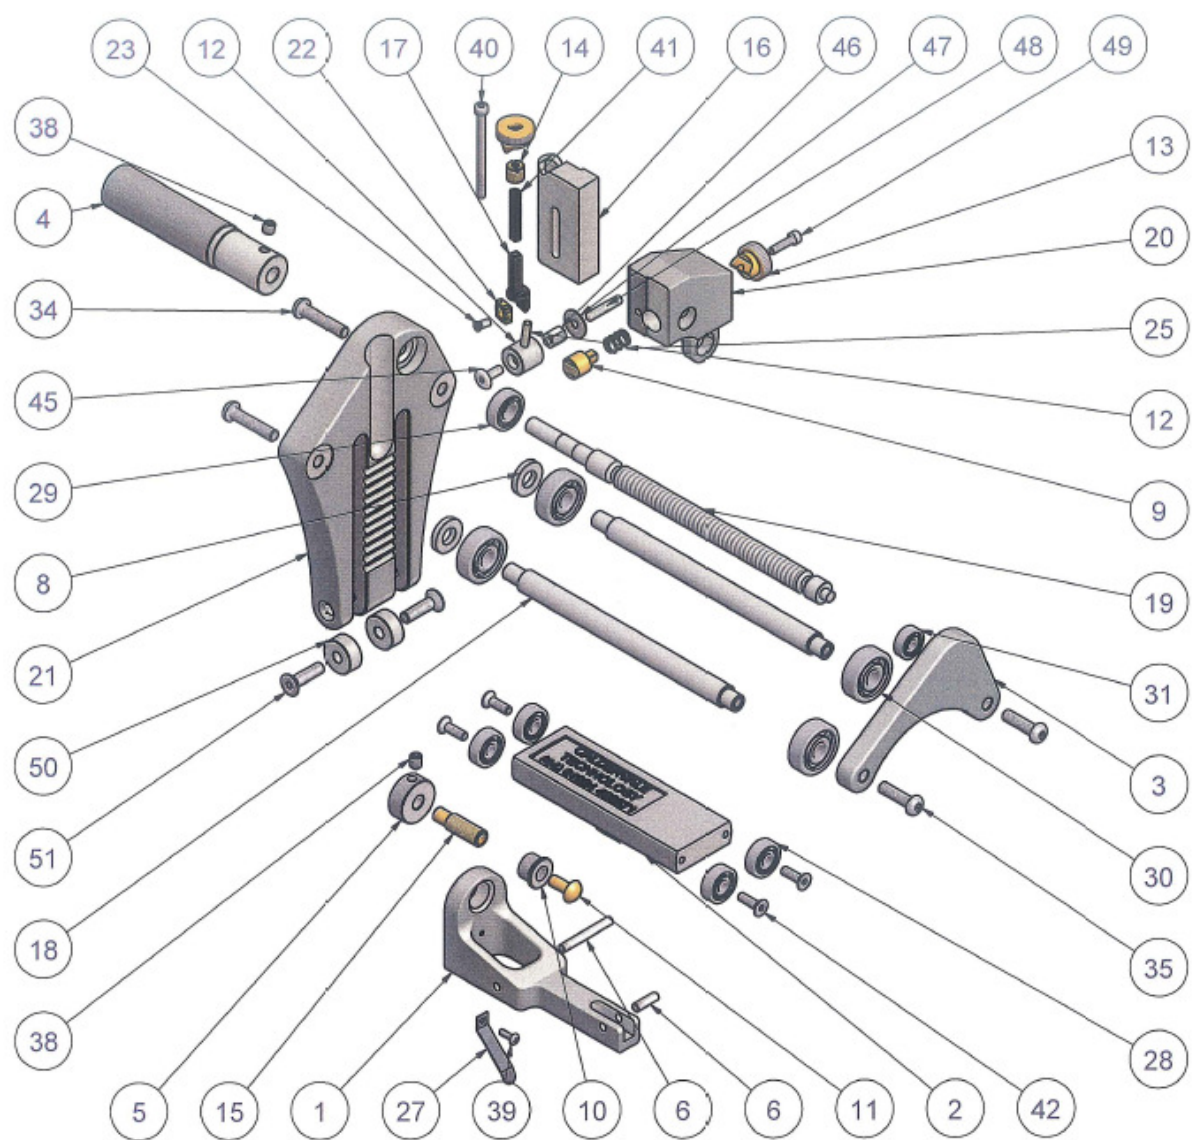

Uniprep spares**400/500mm Uniprep**

Item No.	CTL Part No.	Description
1	z01-02-001	Under arm casting only
2	z01-02-101	Under carriage casting only w/o bearing
3	z01-02-102	Boomerang end plate w/o bearing
4	z01-02-103	Drive handle
5	z01-02-104	Pressure thumbscrew
6	z01-02-005	Set of pivot pins
8	z01-02-105	Axel spacers
9	z01-02-007	Quick release button
10	z01-02-008	Steel thread insert
11	z01-02-009	Pressure mushroom pad
12	z01-02-010	Carriage positioning thumbscrew
13	z01-02-011	Spring tension control 'v' thumbscrew
14	z01-02-012	Cutting tool spring grub-screw
15	z01-02-106	Pressure screw only
16	z01-02-013	Tool-post cartridge body only
17	01-02-017	Scraping blade holder
18	z01-02-107	400mm axel
18	z01-02-201	500mm axel
19	z01-02-108	400mm feed-screw
19	z01-02-202	500mm feed-screw
20	z01-02-109	Tool-post casting
21	z01-02-110	Main body casting w/o bearing
22	01-02-022	Scraping blade 4 sided
23	z01-02-018	Scraping blade retaining screw
25	z01-02-019	Quick release button spring
27	z01-02-020	Leaf spring
28	Z256-A008-011	Bearing 629 2 RS
29	Z256-A008-012	Bearing 6001 2 RS
30	Z256-A008-014	Bearing 6301 2 RS
31	Z256-A008-010	Bearing 608 2 RS
34	Z183-T006-197	Screw M8 x 40 skt button
35	Z183-T006-190	Screw M8 x 25 skt button
38	Z183-T006-207	Grub-screw M8 x 6
39	Z183-T006-020	M4 x 12 pozi screw (leaf spring)
40	Z183-T006-138	Screw M5 x 70 cap head
41	z01-02-021	Pressure spring
42	Z183-T006-157	Screw M6 x 20 skt c/s
45	Z183-C048-001	Furniture Screw
46	Z183-T006-146	Rod connector M6
47	Z183-T006-159	Washer M6 x 20
48	Z183-T006-164	Studding M6 x 35
49	Z183-T006-132	Screw M5 x 20
50	z01-02-112	Body spacer
51	Z183-T006-195	Screw M8 x 35 skt c/s
	z01-02-111	Complete underarm assembly
	z01-02-023	Cartridge position assembly comp
	z01-02-022	Cartridge assembly comp inc. blade

Specifications.

Materials:	Mild Steel EN3A, Stainless steel, Aluminum, Brass & Tungsten Carbide
Finish:	Natural / Zinc passivate to mild steel
Dimensions:	L360 x W160 x H290 mm
Depth of cut:	0.30 mm.
Max: length of scrape	165mm, Feed per rotation 4.5mm
Weight:	Excluding tool box 4.50 Kg Including tool box 6.5 Kg

This unit is design and manufactured to meet the requirements of National Grid Gas Industry Standards GIS/PL2-5:2006

Part 5: Electrofusion ancillary tooling.

Caldervale Technology Ltd has a policy of continuous improvement in product quality and design. Caldervale Technology Ltd therefore reserves the right to change the specification of its models at any time, without prior notice.

It is the responsibility of the operator to ensure that the PE pipe is suitable for pipe preparation if in doubt contact the PE pipe manufacturer for confirmation

Important!

This manual outlines the operation of the pipe surface preparation tooling for the scraping of PE pipe prior to the electrofusion welding process.

This manual forms a part of the product to which it relates. It should be kept for the life of the product. Any amendments issued by Caldervale Technology Ltd should be incorporated in the text. The manual should be passed to any subsequent holder or user of this product.

General description.


The pipe preparation tool is designed to provide a fusible surface on any polyethylene pipe material (new, weathered or previously installed).

Before using

It is important to ensure all component parts are present and in serviceable condition. In addition, the condition of the cutting / peeling tip should be checked for damage or excessive wearing.

Safety Instructions

1. Read the instruction booklet before using the tool.
2. It is imperative that all possible precautions are made to avoid unexpected pipe movement when the tool is being use.
3. Never use the tool on pipes that are not within the specified dimensions.
4. The tool tip holder spring tension is factory set and **MUST NOT** be tampered without adequate training or instruction
5. Operatives should wear eye protection, gloves, safety headwear & footwear when using the equipment.
6. A single scrape / pass cannot be guaranteed to provide 100% preparation, where this is required users are advised to consider making 2 scrapes around the pipe.

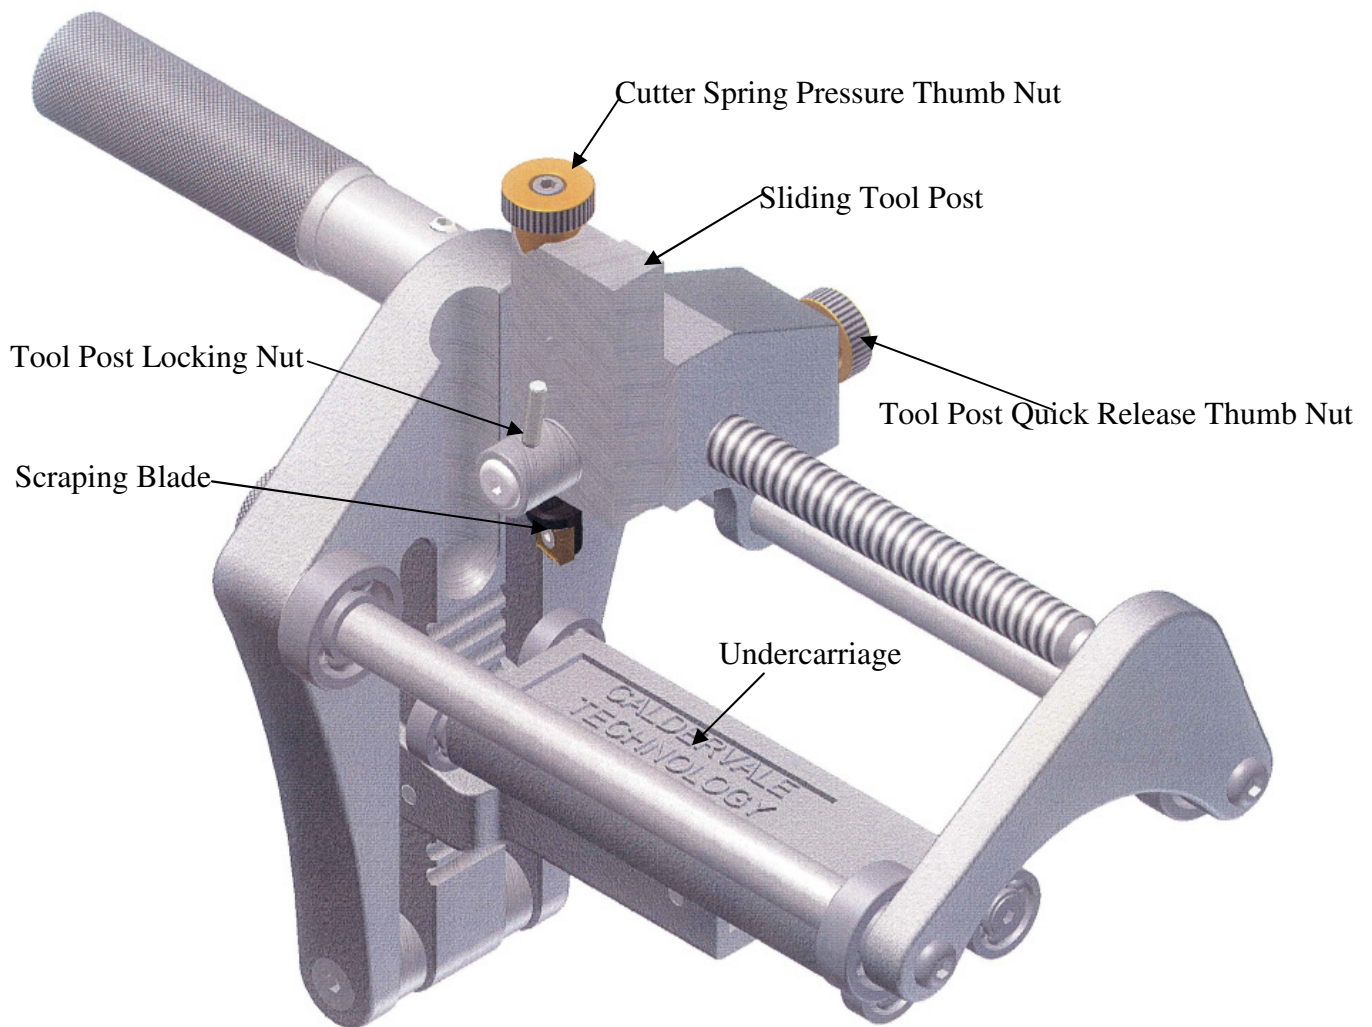

Instructions for use.

- 1) Ensure that the pipe end is cut square, is free of burrs and the section to be scraped does not have any deep scores.
- 2) Mark the pipe outer wall at a point 50% of the length of the coupler plus 25mm.
- 3) Release the tool post by loosening the tool post locking screw, position the tool post furthest away from the undercarriage and temporarily retighten.
- 4) Position the scraper onto the pipe with the tool resting on the axle wheels

5) Fix the tool in its operating position by fully loosening the under arm pressure screw, then push the underarm inward to release the ladder pin from the main body ladder and the upwards until the wheels of the undercarriage are near to the inner wall of the pipe. Releasing pressure on the underarm allows the ladder pin to locate back into the main body ladder. Fixing of the tool is completed by screwing inwards the underarm pressure screw, until the wheels on the undercarriage are in firm contact with the inner wall of the pipe.

6) Slowly rotate the scraper around the pipe 2 or 3 times to ensure that it is positioned correctly adjusting the underarm pressure screw to ensure ease of rotation.

7) Quarter turn the quick release thumb wheel (see reverse view) to allow the tool post to move freely along the feed screw. Remove the protection cap from the cutter above the mark on the pipe (see 2) a further quarter turn of the thumbwheel will engage the feed screw-drive.

8) Quarter turn the cutter spring thumb wheel to disengage pressure on the cutter. Release the tool post locking screw **slide the tool post down until the cutter is 1-2mm from the pipe wall**, and screw in the tool post locking screw to fix the tool post in its correct operating position. Re-engage the pressure on the cutter by a further quarter turn of the cutter spring thumb wheel. The cutter should now be touching the pipe wall surface.

9) Rotate the scraping tool around the pipe in a steady clockwise direction. The cutter will travel towards the pipe end removing a continuous strip of PE the process may be halted from time to time to remove surplus peel.

Instructions for removal after completion of pipe preparation.

1) On completion, the scraped section should be inspected for areas of un-scraped pipe. If necessary the pipe can be scraped again.

2) To remove the scraper, loosen the tool post locking screw and raise the tool post clear of the pipe and retighten. Loosen the underarm pressure screw to release the undercarriage wheels and remove the scraper from the pipe. Refit the protective cover to the cutter tip.

Storage

IMPORTANT: When not in use always –

1. Store the tool in a tool box.
2. Ensure the tool tip tension is released.

Maintenance

Lubricate all moving parts at regular intervals.



EC DECLARATION OF CONFORMITY

MACHINERY SUPPLIER: Caldervale Technology Limited

SUPPLIER'S ADDRESS: Bretfield Court,
Dewsbury,
WF12 9DB,
UK

Declares that the Machinery described below:

Make: CTL
Product: Maxifuse™ Pipe end preparation tools
Type: Uniprep1
Reference No: 01-02-001

Conforms to the following Directives:

98/37/EC Machinery (Safety) Regulations (as amended)

Meets the following standards:

Safety of Machinery

BS EN 12100: 2003, BS EN 982: 1996

Gas Industry Standard

GIS/PL2-5:2006 part 5 Electrofusion ancillary tooling

Complies with, or is designed and constructed so far as is possible to comply with the relevant essential health and safety requirements, taking into account the state of the art.

Modifications to the equipment without prior approval by the undersigned will render this Declaration null & void

For and on behalf of the Manufacturer:

Signature:

Gordon Lilley – Managing Director (CE Responsible Person)

Signed at: on:(date)

Signature of this Declaration of Conformity authorises the manufacturer or his authorised representative in the community to affix the CE Mark to the equipment

Certificate of calibration.

- This product has been inspected and tested in accordance with the ISO9001 quality control systems and procedures in place at Caldervale Technology Ltd, Dewsbury.
- This product has no calibration period, periodic, safety inspections should be carried out by the operator if in any doubt please contact the manufacturer for further information

Decommissioning & Disposal Instructions

These give the instructions for decommissioning and disposal of the equipment and confirm how it is to be taken out of service safely, in respect of the Essential Health and Safety Requirements.

- If a Maxifuse™ Pipe surface preparation tool has reached the end of its useful working life and cannot be refurbished it must be disposed of through a licensed scrap or waste disposal facility. Alternatively, a reverse engineering company could be used to strip the equipment for recycling purposes.
- Disposal is the responsibility of the Customer this can also be achieved by returning the product back to the manufacturer

Warranty Information.

1. Extent of Warranty.

- (a) Subject to clauses 2 and 3, Caldervale Technology Ltd warrants to the end-user customer that its products will be free from defects in materials and workmanship, for six months after the date of purchase by the end-user customer, subject to providing proof of purchase.
- (b) If Caldervale Technology Ltd receives, during the warranty period, notice of a defect in product which is covered by this warranty; Caldervale Technology Ltd shall either repair or replace the product, at its option. Any replacement product may be either new or like-new, provided that it has functionality at least equal to that of the product being replaced.
- (c) All warranty work will be carried out by Caldervale Technology Ltd unless otherwise agreed. On-site warranty and repair or replacement services are available from authorised Caldervale Technology Ltd service facilities world-wide.
- (d) Customers shall prepay shipping charges for products returned to Caldervale Technology Ltd for warranty service, and Caldervale Technology Ltd will charge for return of the products back to the customer.
- (e) This warranty statement gives the customer specific legal rights. The customer may also have other rights which vary from country to country in the world.

2. Pre-conditions for Warranty Application.

Caldervale Technology Ltd' warranty covers only those defects which arise as a result of normal use of the product, and this warranty shall only apply in the following circumstances:

- (a) All the instructions contained in the operating manual have been complied with; and
- (b) None of the following apply:
 - (i) Improper or inadequate maintenance;
 - (ii) Physical abuse;
 - (iii) Unauthorised modification, misuse or any use not in accordance with the operating manual and good industry practice;
 - (iv) Operation outside the products specifications;
 - (v) Improper site preparation or maintenance;
 - (vi) Faulty pipe.

3. Limitations of Warranty.

- (a) Caldervale Technology Ltd does not warrant the operation of any product to be uninterrupted or error free.
- (b) Caldervale Technology Ltd makes no other warranty of any kind, whether express or implied, with respect to its products. Caldervale Technology Ltd specifically disclaims the implied warranties of satisfactory quality and fitness for a particular purpose.
- (c) To the extent that this warranty statement is inconsistent with the law of the locality where the customer uses the product, this warranty statement shall be deemed modified by the minimum necessary to be consistent with such local law.
- (d) To the extent allowed by local law, the remedies provided in this warranty statement are the customer's sole and exclusive remedies.
- (e) This tool has been designed for the range of pipes available at the time of its design and development. Caldervale Technology Ltd can accept NO liability for the unit's ability or otherwise to work with new or different pipes that subsequently appear in the market place.

Please complete this information and keep it safely with your proof of purchase receipt. You will require it for any warranty claim.

Where purchased

Date of purchase

Name & address
of purchaser

Type of tool

Serial number

For Service and repair please contact:

Caldervale Technology Ltd

Bretfield Court
Dewsbury
West Yorkshire
WF12 9DB
United Kingdom

Tel: +44 (0)1924 469571

Fax: +44 (0)1924 460951

sales@caldertech.com

<http://www.caldertech.com>